



WARNING

READ OPERATING INSTRUCTIONS AND OWNERS MANUAL BEFORE USE

- HIGH PRESSURE WATER MACHINES SHOULD ONLY BE OPERATED BY A PERSON TRAINED OR QUALIFIED TO DO SO.
- DO NOT DIRECT WATER JET AT ANY PART OF THIS MACHINE (IF ELECTRIC POWERED) OR ANY OTHER ELECTRICAL EQUIPMENT.
- DO NOT SPRAY ANY PERSON, ANIMAL, OR PLACE ANY PART OF THE BODY IN FRONT OF THE NOZZLE.
- DO NOT OPERATE WITHOUT WATER.
- DO NOT OPERATE WITH ANY COVERS OR EQUIPMENT REMOVED.
- EYE PROTECTION IS RECOMMENDED.
- ENSURE ADEQUATE VENTILATION WHEN USING MACHINE IN CONFINED AREAS.
- **REFUEL IN A WELL-VENTILATED AREA WITH THE ENGINE STOPPED.**
- **IF THE ENGINE HAS BEEN RUNNING, ALLOW IT TO COOL FIRST.**
- **NEVER REFUEL THE ENGINE INSIDE A BUILDING WHERE GASOLINE FUMES MAY REACH FLAMES OR SPARKS.**
- IF THE MACHINE IS FITTED WITH AN INTERNAL BYPASS DO NOT ALLOW THE MACHINE TO RUN FOR LONGER THAN 1 MINUTE WITHOUT OPERATING GUN OR TURNING MOTOR OFF.
- DO NOT USE A FUEL-POWERED MACHINE INDOORS OR IN CONFINED AREAS, ENSURE ADEQUATE VENTILATION.
- ENSURE ELECTRICAL CORDS AND PLUGS ARE AWAY FROM ANY WATER.
- THE MACHINE MUST NOT BE TAMPERED WITH FOR ANY REASON. IN CASE OF TAMPERING, THE MANUFACTURER DECLINES ANY RESPONSIBILITY ON THE FUNCTIONING AND SAFETY OF THE MACHINE.
- THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGES CAUSED BY INCORRECT USE OF THE MACHINE.

START UP PROCEDURES

- CHECK ALL OIL LEVELS AND CONDITION, CHANGE IF NECESSARY.
- ENSURE MACHINE IS ON A HORIZONTAL PLANE TO ENSURE EVEN OIL DISTRIBUTION.
- IF OPERATING A FUEL POWERED MACHINE ENSURE ADEQUATE VENTILATION AND DO NOT PLACE EXHAUST OUTLET TOO CLOSE TO ANYTHING.
- IF OPERATING AN ELECTRIC MACHINE ENSURE ELECTRICAL CORDS AND PLUGS ARE AWAY FROM ANY WATER (ALWAYS USE AN ELECTRICAL CORD WITH AN AMP RATING GREATER THAN THAT OF THE MACHINE).
- CHECK WATER FILTER IS CLEAN AND IN GOOD WORKING ORDER.
- CONNECT WATER SUPPLY TO INLET OF PUMP (FOR MACHINES 15LT AND OVERUSE $\frac{3}{4}$ HOSE OR LARGER).
- CONNECT HIGH PRESSURE HOSE AND GUN TO OUTLET OF PUMP.
- TURN ON WATER SUPPLY AND BLEED ANY AIR FROM HOSES BEFORE TURNING THE MACHINE ON.
- YOU ARE NOW READY TO START THE MACHINE.
- IF THE MACHINE IS FITTED WITH AN INTERNAL BYPASS DO NOT ALLOW THE MACHINE TO RUN FOR LONGER THAN 1 MINUTE WITHOUT OPERATING GUN OR TURNING THE MOTOR OFF.



NOTE:

FOR ANY OTHER TERMS, CONDITIONS AND SAFETY INFORMATION PLEASE VISIT OUR WEBSITE

www.interpump.au