



HOT BOX MANUAL:

WARNING

- *Do not leave the machine unattended with people who are not familiar with it especially children.
- *Never aim the water jet at the machine, a person or an animal.
- *The machine must only operate on a horizontal plain.
- *Do not operate machine indoors without adequate ventilation.
- *Do not pull machine by high pressure hose or electric cable.

INSTALLATION

- *Familiarise your self with the machine.
 - ***Electric cable**
 - ***Water inlet**
 - ***Water outlet**
 - ***Fuel (diesel) Tank**
 - ***On Off switch**
 - ***Thermostat**
 - ***Exhaust stack**
- *Plumb hot box in to the system.
- *Fill fuel tank with diesel.
- *Set the thermostat to the required temperature.
- *Plug electric lead in to an adequate power source with an earth and fitted with a safety cut out.
- *Turn the hot box on when required.
- *Operate high pressure water unit in accordance with its own manual.

SHUT DOWN

- *Turn hot box switch off
- *Run water through hot box for a further 5 minutes so as to cool the coil.
- *Shut down high pressure water unit in accordance with its own manual.