



TANK SUPPLY:

- * The pump and tank can sit on the same plane.
- * Fit an adequate size float valve to the top of the tank at the diagonal opposite side of the outlt.
- * Fit an adequate size water filter to the inlet to the float valve.
- * Fit a ball valve to the outlet of the tank so you can shut off the flow of water when you need to service the pump.
- * Fit a structured suction line from the tank to the pump. For 15lt-30lt, ¾" is required.
- * Do not fit any elbows and do not fit a filter between the tank and pump, as it will cause a restriction.
- * Fit a ½" bypass line from the unloader valve to the top of the tank, not directly above the feed.