



INSTRUCTIONS FOR DIAGNOSING PRESSURE LOSS:

1. Set machine up to run (see Petrol / Electric Machine Running Instructions)
2. Fit correct size nozzle (see nozzle chart).
3. Open bypass to atmosphere.
4. Run machine at correct full speed (See "Correctly Setting Petrol Motor Revs") for Petrol Engine.
5. Hold gun open.
6. Re-set unloader valve (See "Unloader Valve Setting Instructions").
7. Evaluate if the loss of water is,
 - a: Not coming out the bypass, Then the problem is with,
 - 1: The water supply, (clean out all filters and any blockages)
 - 2: The pump, (see pump service procedure)
 - b: Coming out the bypass, Then the problem is with the bypass valve.
 - 1: Service and clean it. Then re-do ("Unloader Valve Setting Instructions")
 - 2: replace it. Then re-do ("Unloader Valve Setting Instructions")