



## **PETROL MACHINE RUNNING INSTRUCTIONS:**

1. Place machine in a fixed, horizontal, well ventilated position.
2. Check oil levels – engine dipstick full, halfway up pump visor.
3. Ensure fuel tank is full before starting.  
**Warning: Refuel in a well ventilated area with the engine stopped.**  
**If the engine has been running, allow it to cool first.**  
**Never refuel the engine inside a building where gasoline fumes may reach flames or sparks.**
4. Turn on petrol tap.
5. Connect both hoses and gun to machine.
6. Turn on water supply.
7. Pull trigger and expel air.
8. Start engine at low speed and allow to warm up for 2 minutes.
9. Accelerate to required pressure.
10. Warning: This machine is lethal,  
**Do Not** point it at any Body parts, People or Animals.
11. If your machine has not been fitted with a water tank, whilst machine is running do not close trigger for longer than one minute.  
After one minute either open trigger or turn machine off.
12. Before turning machine off, take accelerator to low speed and allow to cool down for 2 minutes.
13. Turn engine off.
14. Turn off water supply.
15. Pull trigger and release any pressure remaining in the system.
16. Disconnect hoses.
17. Turn off petrol tap.