



## **ELECTRIC MACHINE RUNNING INSTRUCTIONS:**

1. Place machine in a fixed, horizontal, well ventilated dry position.
2. Check pump oil level, halfway up pump visor.
3. Connect machine to a rated power supply.
4. Connect both hoses and gun to machine.
5. Turn on water supply.
6. Pull trigger and expel air.
7. Turn motor on.
8. Warning – This machine is lethal, **Do Not** point it at any Body parts, People or Animals.
9. If your machine has not been fitted with a water tank or an auto control system, whilst machine is running do not close trigger for longer than one minute.  
After one minute either open trigger or turn machine off.
10. Turn motor off.
11. Disconnect power supply.
12. Turn off water supply.
13. Pull trigger and release any pressure remaining in the system.
14. Disconnect hoses.